 


iTube
5152 960_961B

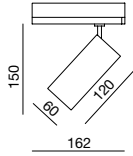

5152 960 319B	10,3W.	1.405	136,4lm/W.	spot	3.000
5152 960 325B	10,3W.	1.405	136,4lm/W.	medium	3.000
5152 960 337B	10,3W.	1.405	136,4lm/W.	flood	3.000
5152 960 419B	10,3W.	1.486	144,3lm/W.	spot	4.000
5152 960 425B	10,3W.	1.486	144,3lm/W.	medium	4.000
5152 960 437B	10,3W.	1.486	144,3lm/W.	flood	4.000
5152 961 319B	16,8W.	2.422	144,2lm/W.	spot	3.000
5152 961 325B	16,8W.	2.422	144,2lm/W.	medium	3.000
5152 961 337B	16,8W.	2.422	144,2lm/W.	flood	3.000
5152 961 419B	16,8W.	2.526	150,4lm/W.	spot	4.000
5152 961 425B	16,8W.	2.526	150,4lm/W.	medium	4.000
5152 961 437B	16,8W.	2.526	150,4lm/W.	flood	4.000
code	module W	lm	efficiency	beam angle	°K

 
disponible en mayo de 2018

colores_colors



materiales_materials

aluminio inyectado
y acero
die cast aluminium
and steel

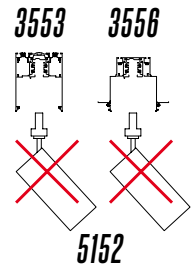

5152






5152 | iTube

válido para todos los proyectores con adaptador a carril trifásico
valid for 3 phase track adaptor spots

 INSTRUCCIONES_INSTRUCTION

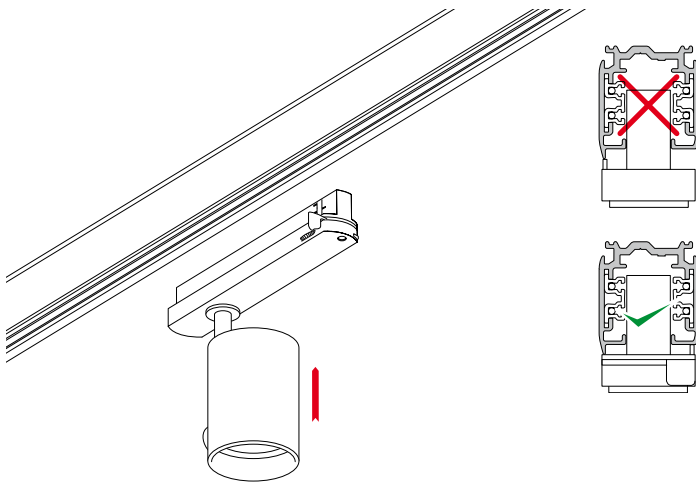


Antes de montar el adaptador en el carril, asegúrese de que la corriente está cortada.

Before installing the adapter into the track, make sure the power is switched off.

Fijar el proyector en el carril trifásico conectando correctamente el adaptador.

 Connect the spotlight into the triphasic track by plugging its adaptor correctly.

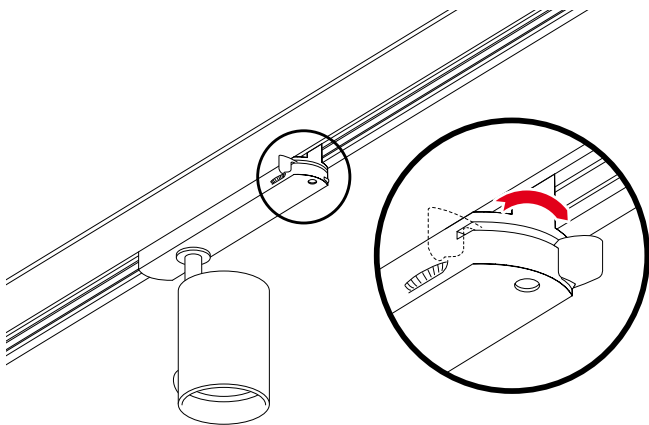


Comprobar la posición correcta para evitar daños

Check the right position to avoid damage

Bloquear la leva en la posición correcta.

 Lock the lever to its correct position.

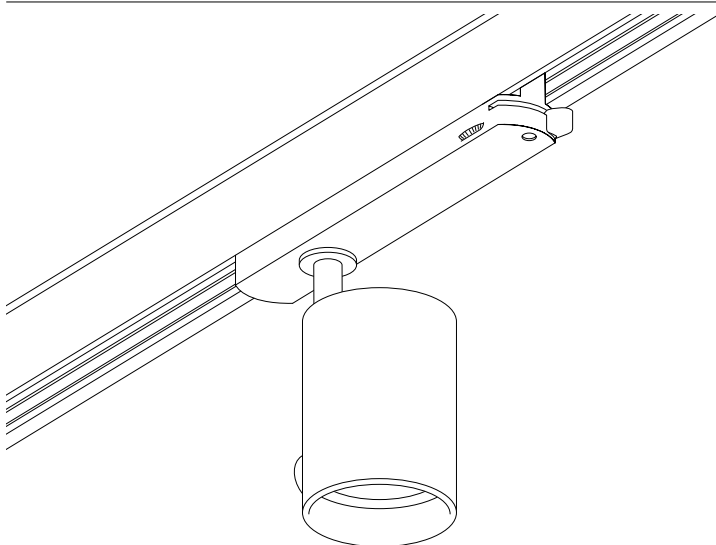

Orientar la luminaria.

Adjust the fixture.